

Step 1

Take out your turntable and anti skid circles.

Step 2

Attach the anti skid circles to the rotation circle so they are placed at the end of the spokes on the wide part of the outer ring.

Step 3

Place the television on top of the turntable. (Television not included) To turn the television, simply grasp the television with both hands and swivel the television.

Step 4

If you are having difficulty turning the turntable please remove television and flip the turntable over. Use a Philips head screwdriver to give the screw in the bottom of the unit a quarter turn counterclockwise to loosen it. Repeat if the turntable is still too tight.

